PARTS LIST

for

Whirlpool CORPORATION

30″ GAS SLIDE-IN RANGE
SOLID-STATE IGNITION
SELF-CLEAN OVEN

MODEL
SS363BETT0

▲T—Neutral

FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS

Whirlpool CORPORATION
Benton Harbor, Michigan.

© 1988 WHIRLPOOL CORPORATION

8-88 Litho in U.S.A.

Part No. 4315032

757-C-9

INTERNAL OVEN PARTS

For Model: SS363BETT0

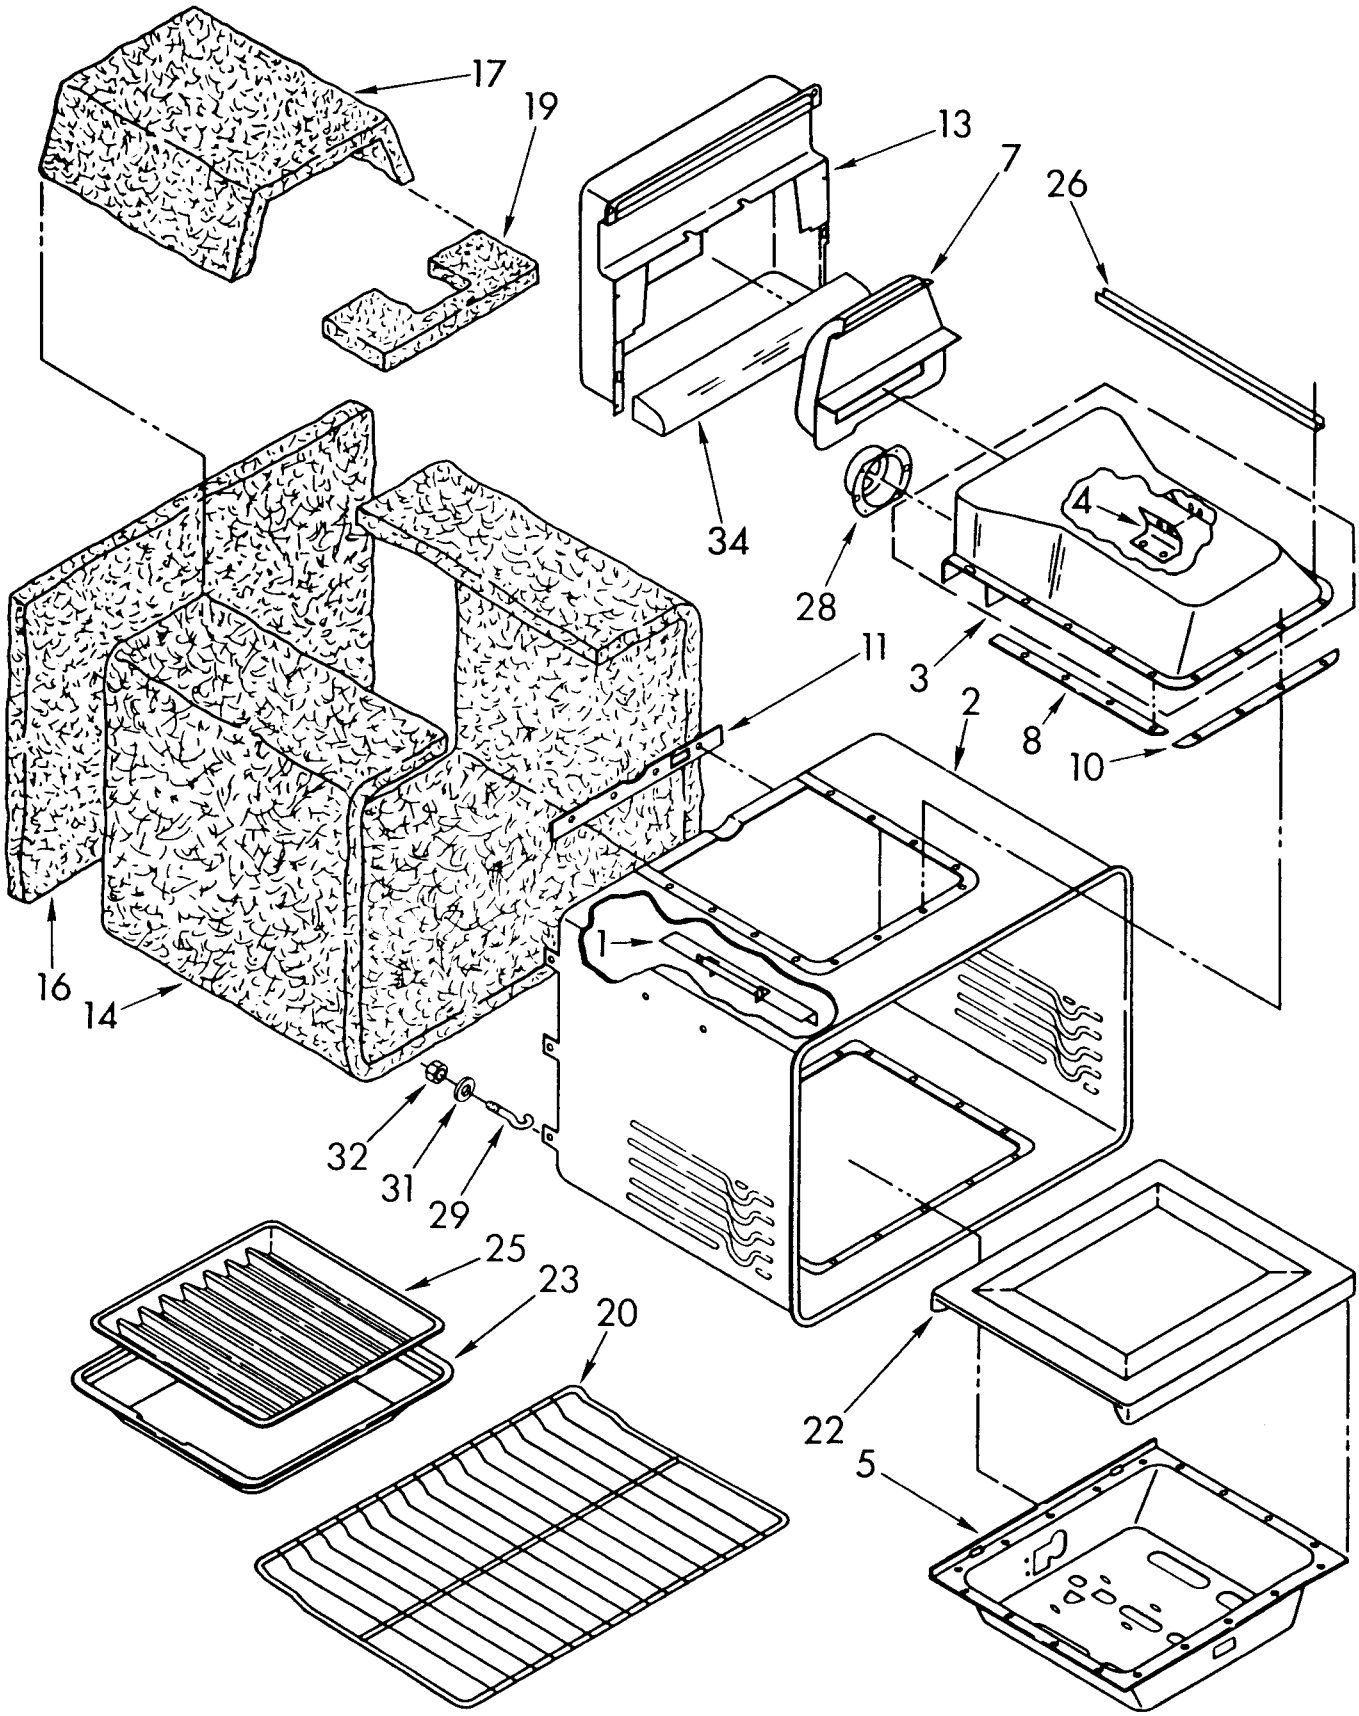

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	786349	Sheild, Thermostat Bulb
2	786334	Oven 30" Self-Clean
3	786597	Chamber, Broiler Burner
4	786543	Bracket, Ignitor
	786740	Screw, 10-24 X 7/16 (2)
5	786336	Burner, Box, Lower
7	786337	Flue, Inner
8	786338	Gasket, Side Chamber (2)
10	786339	Gasket, Front Chamber
11	786340	Gasket, Oven Back
13	786341	Flue, Dillution
14	786674	Insulation, Wrapper
16	786675	Insulation, Oven Back
17	786676	Insulation, Oven Top
19	786677	Insulation, Oven Latch
20	786347	Rack, Oven (2)
22	786348	Bottom, Oven
23	786345	Pan, Broiler
25	786346	Grid, Broiler
26	786355	Channel, Broiler Burner (2)
28	786353	Duct, Cup
29	786350	Hook Bolt, Oven Shell
31	786351	Washer (4)
32	786352	Nut, Hex 10-32(2)
34	4315210	Cover, Flue

EXTERNAL OVEN PARTS

For Model: SS363BETT0

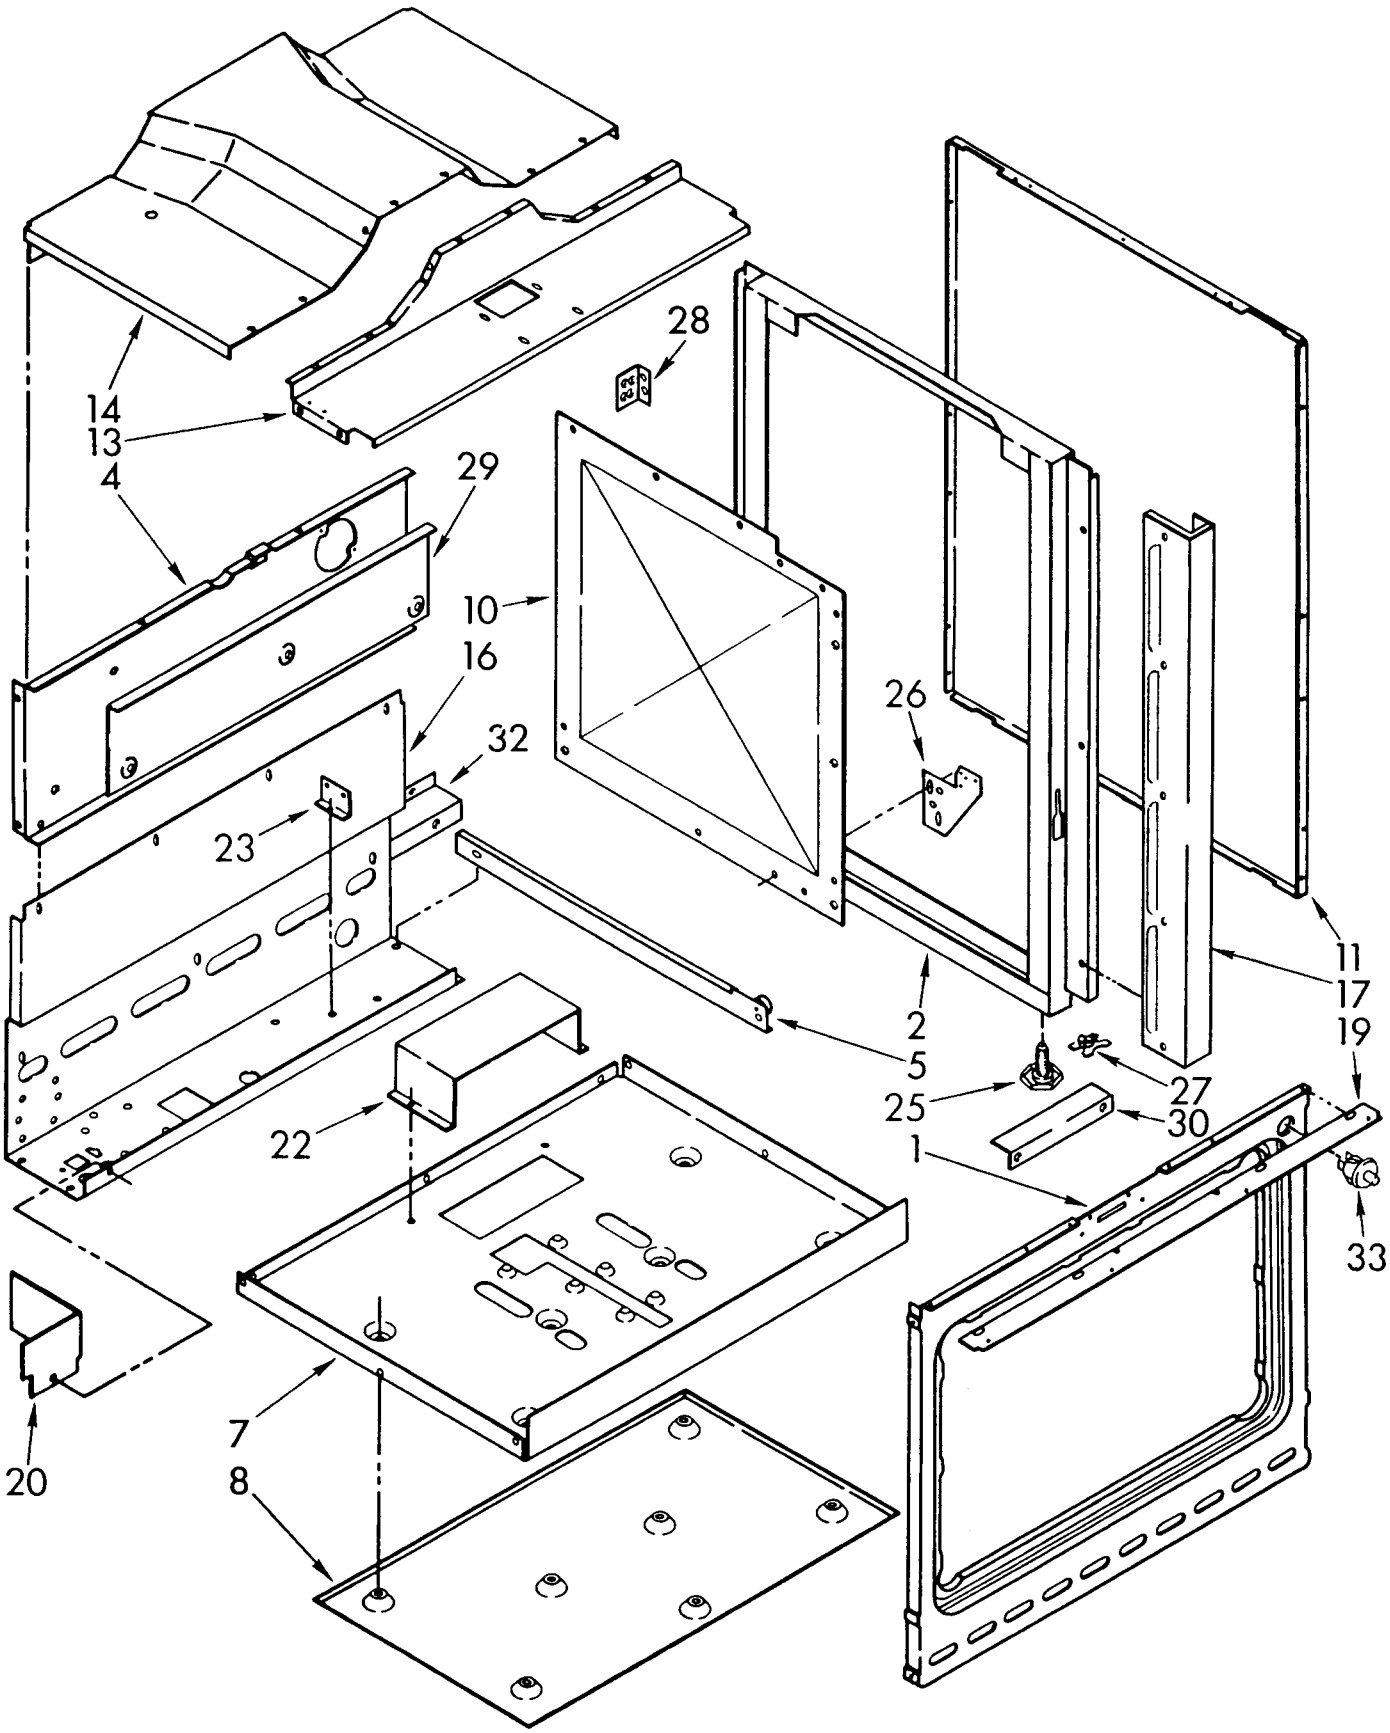

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4179327	Frame, Front
	786223	Screw (10)
2		Frame, Side
	786809	Right Side
	786810	Left Side
4	4179143	Rear Panel, Upper
5		Track, Storage Draw
	786811	Right Side
	786812	Left Side
	786527	Rivet,Plastic (2)
7	786363	Retainer, Bottom Insulation
	786745	Screw, 8 X 3/8 (9)
8	786364	Heat Shield, Storage Drawer
10	786365	Retainer, Insulation (2)
11	786369	Panel, End (2)
13	786371	Retainer, Top Front Insulation
14	786372	Retainer, Top Back Insulation
16	4179142	Rear Panel, Lower
	786272	Nut (4)
	786745	Screw, 8 X 3/8 (2)
	786748	Nut, 6-32
	786749	Screw, 6-32 X 1/4
	786750	Bushing, Snap
17	4315003	Trim, Side Panel (2)
19	786384	Frame, Filler Front
20	786385	Plate, Cover
22	786388	Cover, Burner
23	786389	Bracket, Gas Valve (2)
25	786602	Leg, Leveling (4)
26	786699	Bracket, Door Switch
27	4157527	Nut (4)
28	4315018	Gusset (2)
29	4315025	Heat Shield
30	4315024	Heat Shield, Clock
32	4315106	Cover, Electrical
33	4179328	Switch, Oven Light

MANIFOLD PARTS

For Model: SS363BETT0

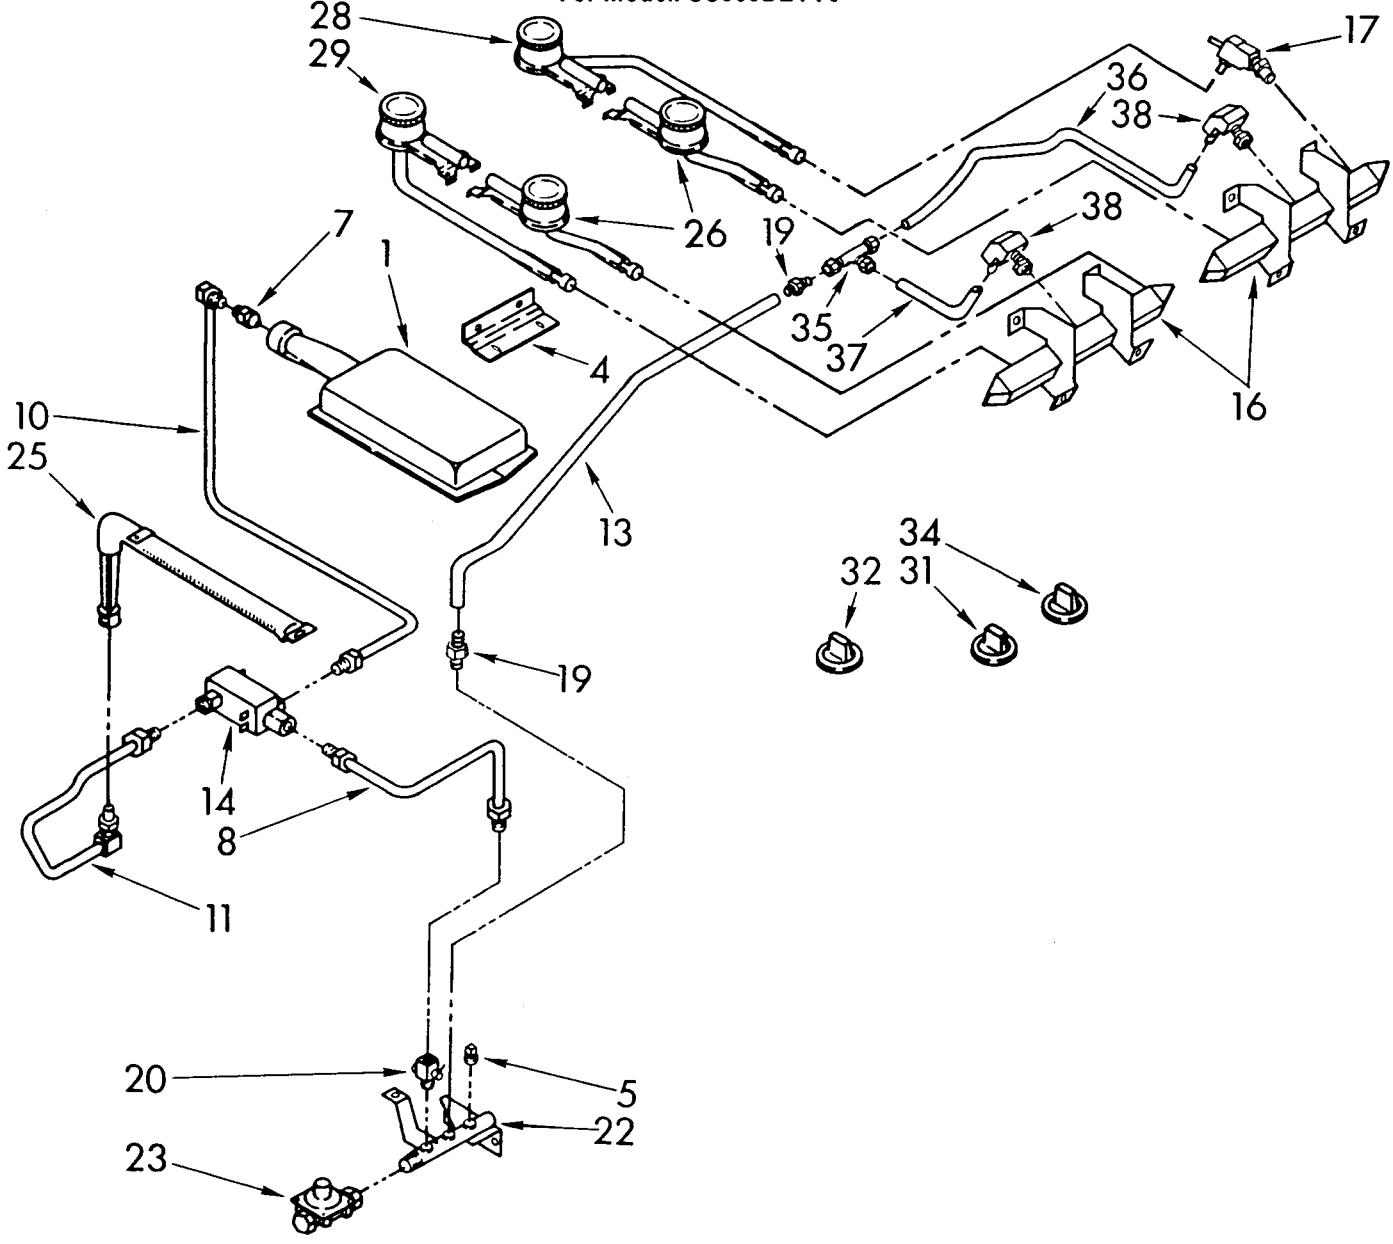

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

(CONTINUED ON 757-D-1)

1	4179233	Burner, Ultra Ray Broiler
	786753	Nut (6)
4	4179235	Bracket, Burner Mounting
5	786545	Pipe Plug, 1/8 NPT
7		Spud, Orifice
	786308	Natural Gas No. 50
	786309	LP Gas No. 58
8	786547	Tubing (Inlet To Gas Valve)
10	786548	Orifice & Tubing Assembly (Gas Valve To Ultra Ray Burner)
	786741	Nut (2)
11	786549	Hood & Tubing Assembly (Gas Valve To Lower Oven Burner)
	786741	Nut
13	4315026	Tubing (Inlet To Tee)
14	786310	Valve, Dual Gas Valve
16	4315004	Manifold (2)
17	4315005	Valve, Top Burner (4)
19	786556	Fitting
20	786312	Valve, Shut-Off
22	786557	Inlet
23	786313	Regulator, Pressure
25	786314	Oven Burner, Lower
26	786315	Top Burner, Front (2)
28	786316	Top Burner, R.R.
29	786317	Top Burner, L.R.
31	4315020	Knob, Top Burner (4)
32	4315021	Knob, Oven Control
34	786562	Knob, Selector
35	4315219	Inlet Tee
36	4315027	Tubing (Tee To L.H. Manifold)
37	4315028	Tubing (Tee To R.H. Manifold)
38	4315029	Elbow, Manifold (2)

OVEN ELECTRICAL PARTS

For Model: SS363BETT0

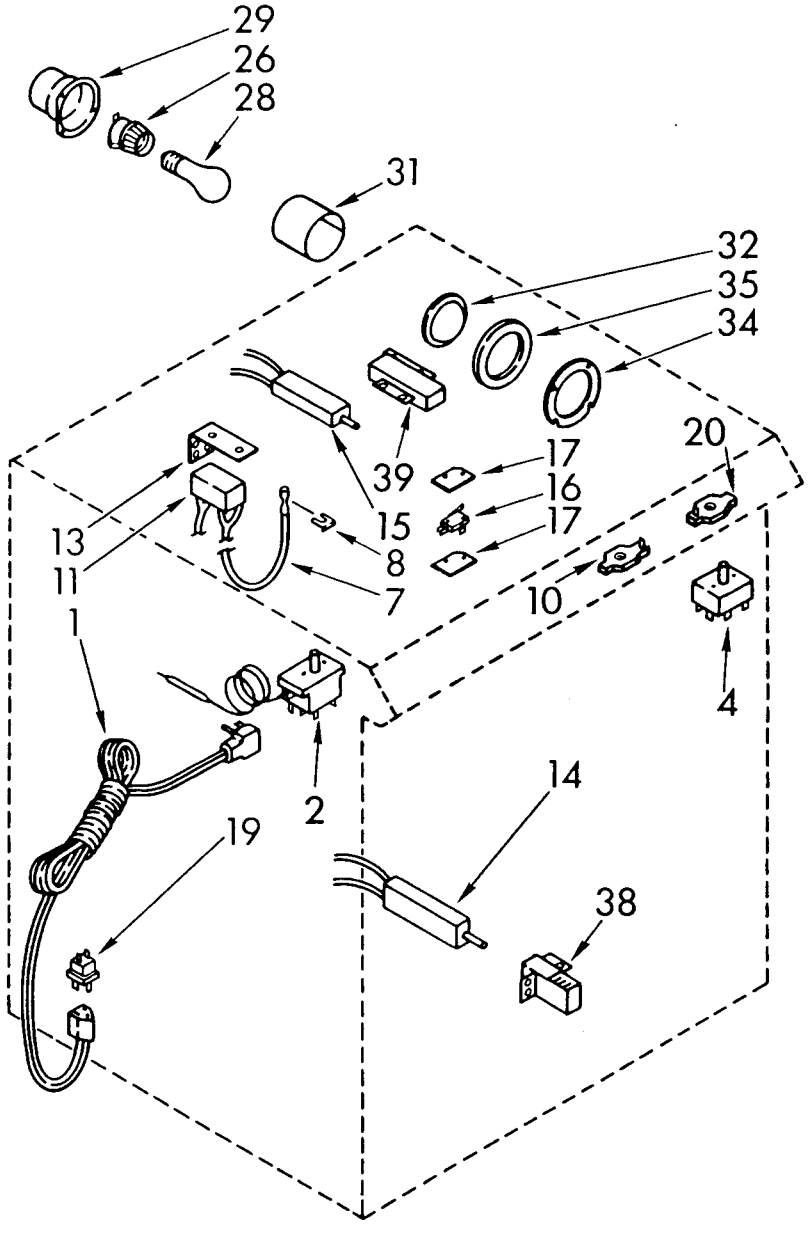

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	786578	Cord, Power
2	4314978	Thermostat, Oven
	786245	Screw, 6-32 x 3/16
4	4179076	Switch, Selector
7		Ignitor, Top
	786320	R.H.
	786321	L.H.
8	786580	Mounting Clip, Electrode (2)
10	4314974	Switch, Spark (2)
11	786323	Spark Module
13	786581	Bracket, Spark Module
14	786659	Ignitor, Bake
15	786660	Ignitor, Broil
	786753	Nut (2)
16	786669	Switch, Oven Door Latch
	786751	Screw, 4-40 X 5/8 (2)
17	786380	Insulator, Switch
19	786570	Plug, Male
20	4314975	Switch, Spark (2)
26	786653	Socket, Oven Light
28	786742	Lamp
29	786743	Housing, Oven Light
31	786573	Retainer, Insulation
32	786574	Lens, Oven Light
34	786575	Retainer, Oven Light Lens
35	786576	Gasket, Oven Light
38	786801	Bracket, Bake Ignitor
39	786802	Bracket, Broil Ignitor

OVEN DOOR AND DRAWER PARTS

For Model: SS363BETT0

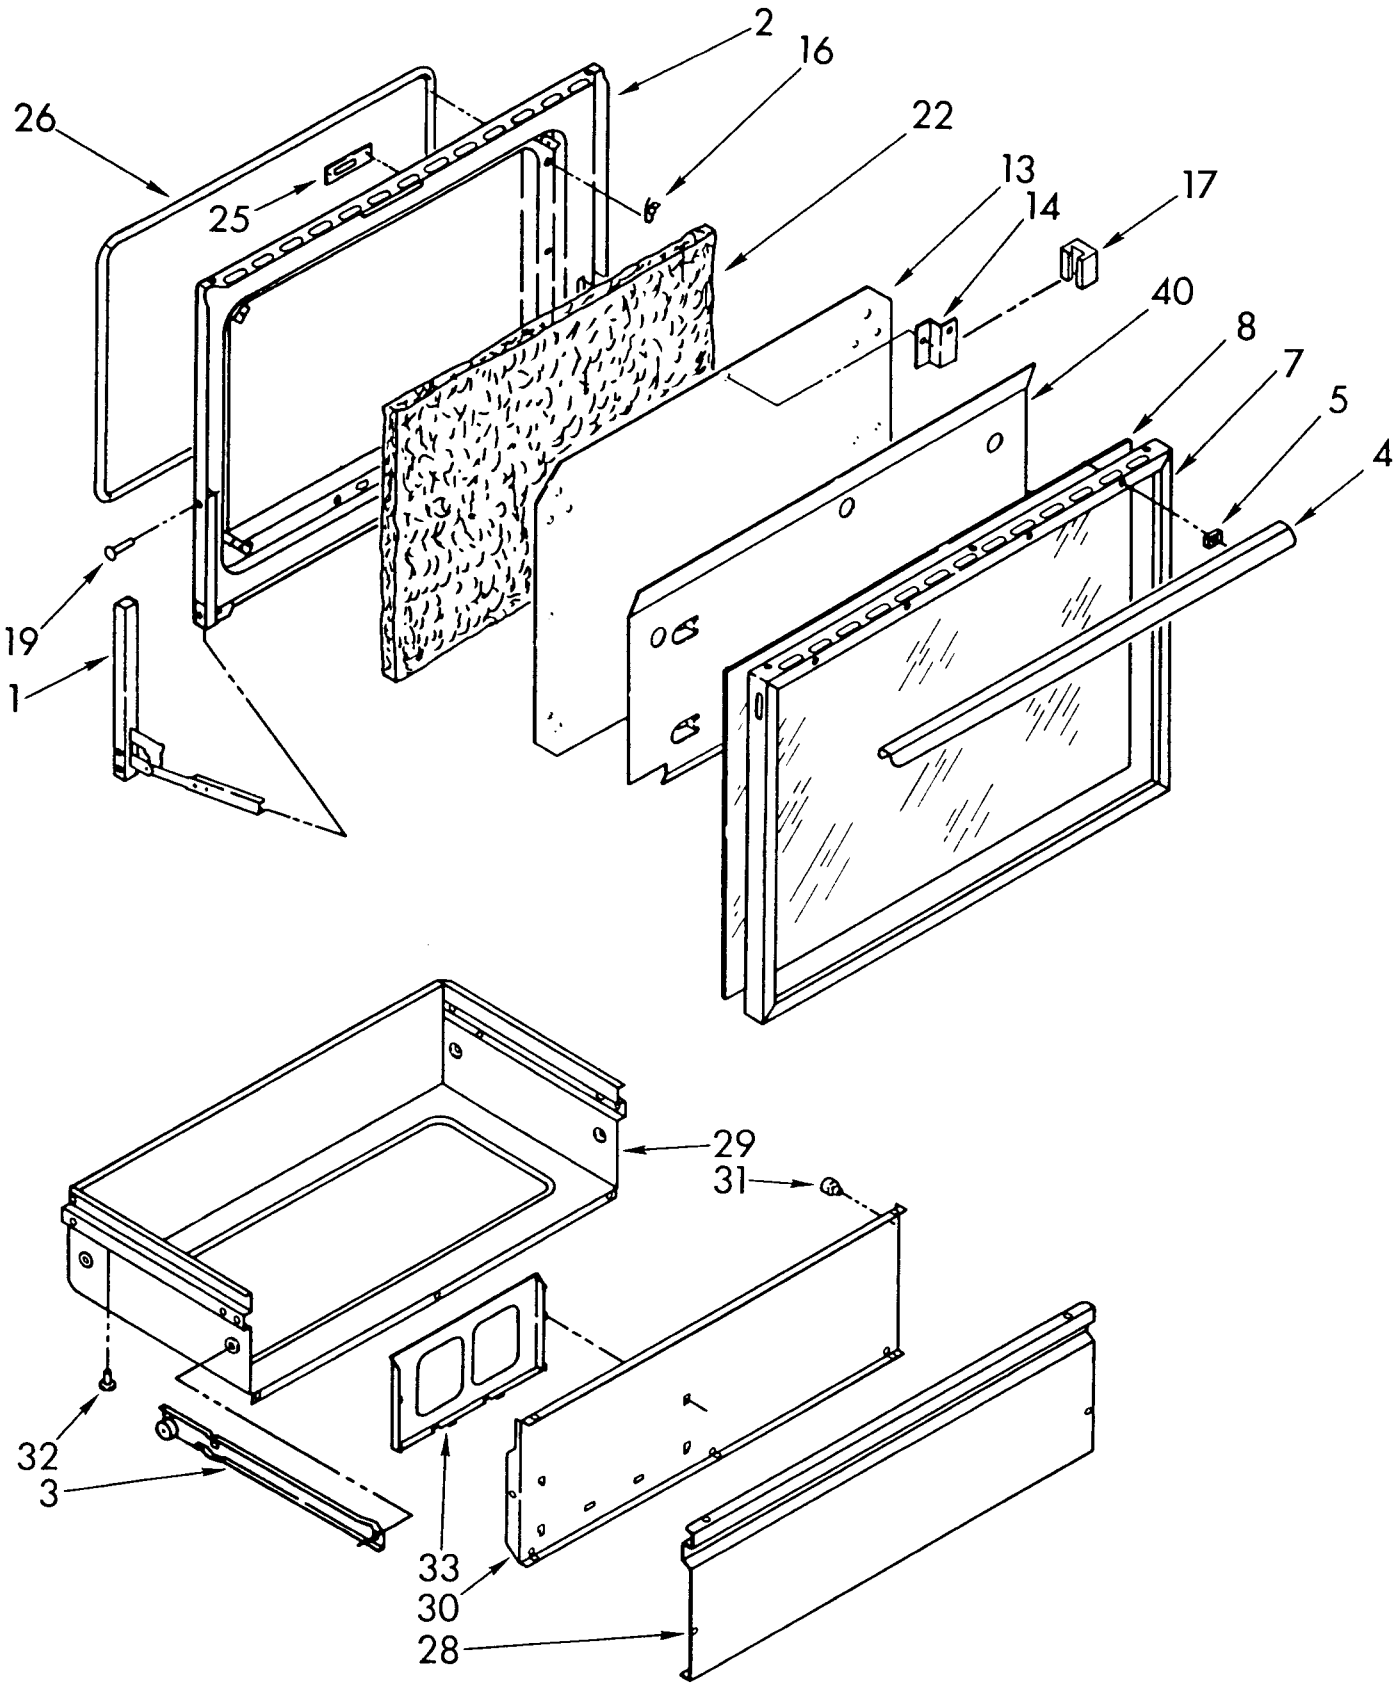

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1		Hinge, Oven Door
	786374	Right Side
	786375	Left Side
2	786405	Liner, Oven Door
	786755	Screw, 8-32 X 5/8 (4)
	786272	Nut (4)
	786756	Screw,8A X 3/8 (6)
	786745	Screw, 8 X 3/8 (3)
	786757	Screw (4)
3		Runner
	786813	L.H.
	786814	R.H.
4	786408	Handle
5	786410	Spacer, Handle (2)
7	786417	Frame
8	786418	Panel, Black Glass
13	786423	Retainer, Insulation
14	786425	Bracket, Glass Support (3)
16	786426	Clip, Speed (15)
17	4179237	Bumper, Window (2)
19	786428	Pin, Hinge (2)
22	786412	Insulation, Door
25	786671	Plate, Latch
26	786432	Gasket Assembly
28	4314976	Panel, Drawer
29	4179232	Wrapper, Drawer
30	786668	Liner, Drawer
31	786526	Bumper (2)
32	786527	Rivet, Plastic (4)
33	786807	Rack, Literature
40	786422	Baffle, Air

CONTROL PANEL PARTS

For Model: SS363BETT0

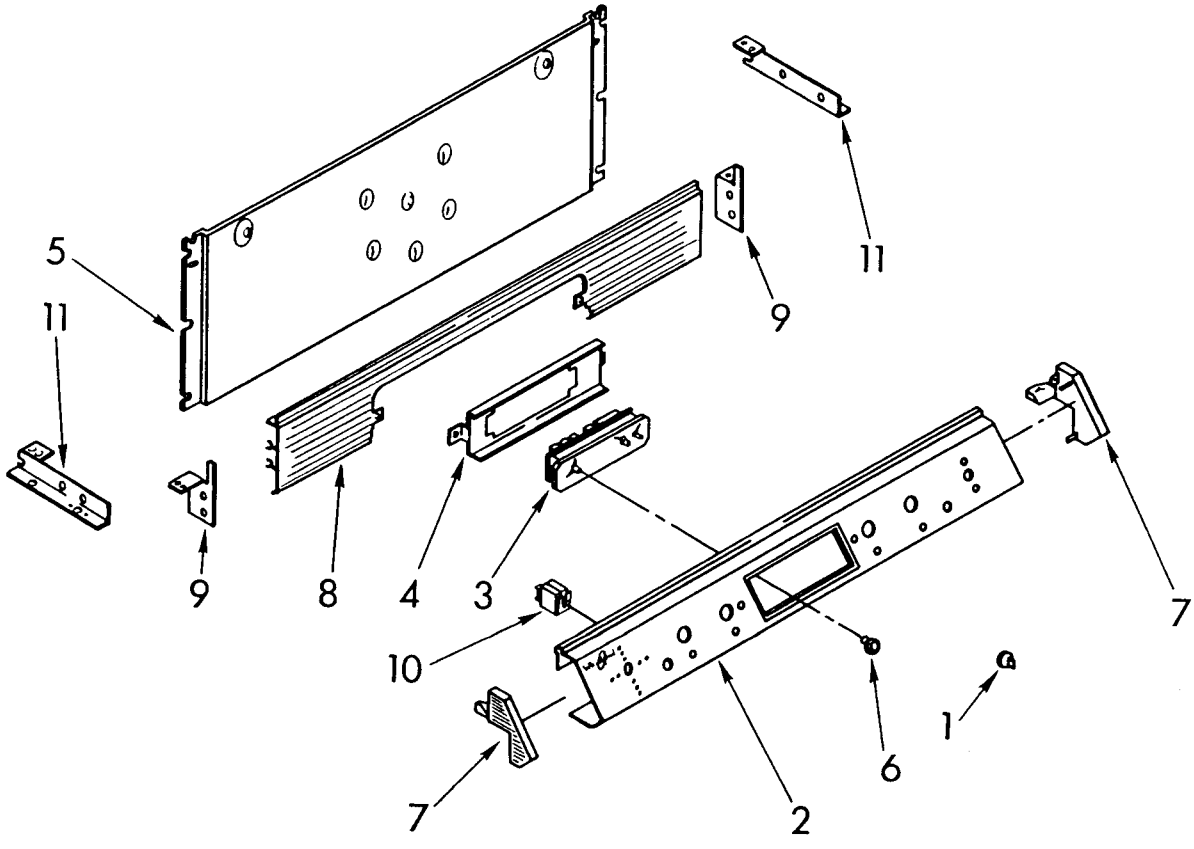

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	786434	Knob, Timer
2	4315010	Control Panel
3	4315011	Timer
4	4315012	Mounting Bracket Timer
5	4315006	Rear Cover
6	4315007	Bushing, Clock
7		Endcap
	4315008	R.H.
	4315009	L.H.
8	4315013	Back Rail
9		Endcap, Back Rail
	4315014	R.H.
	4315015	L.H.
10	4315016	Indicator Light (2)
11		Support, Backguard
	4315022	R.H.
	4315023	L.H.

LITERATURE PARTS

LIT4314835	Guide, Use & Care
LIT4314837	Instructions, Installation
LIT786302	Guide, Cooking
LIT4315032	List, Repair Parts

COOKTOP PARTS

For Model: SS363BETT0

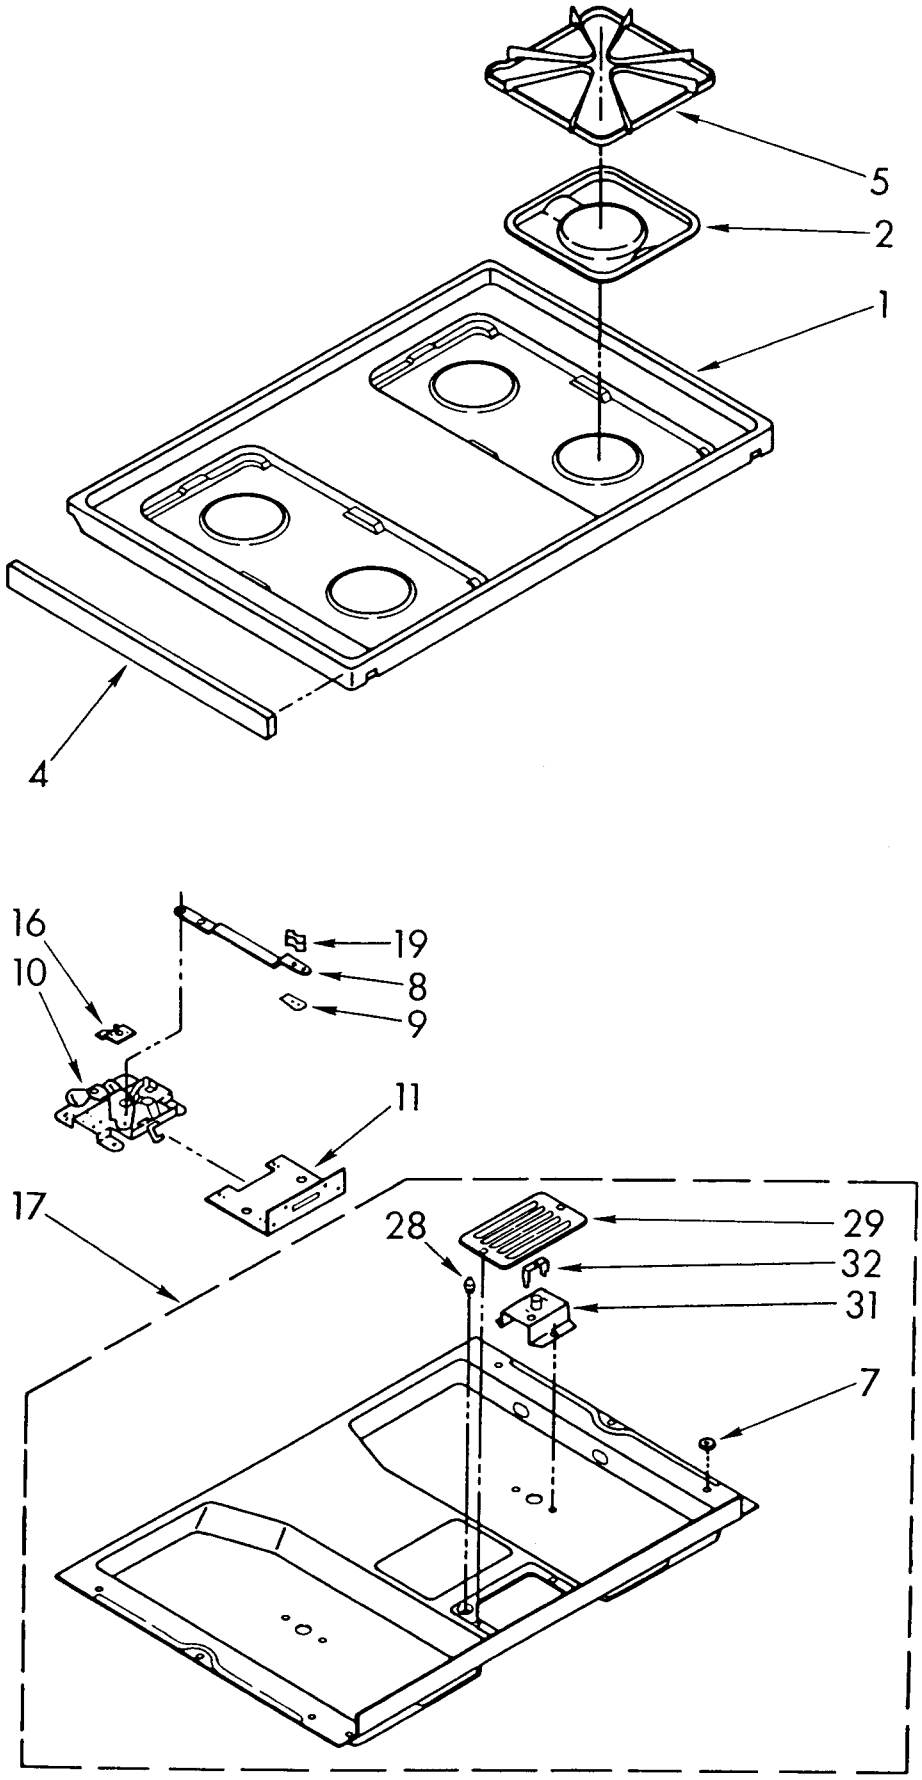

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4315019	Top, Main (Chrome)
	786223	Screw (4)
2	786333	Bowl, Chrome (4)
4		Trim, Main Top
	786343	Right Side
	786344	Left Side
5	786354	Grate, Top Burner (4)
7	786342	Spacer, Nylon (2)
8	786376	Handle, Latch
9	786690	Support, Handle
10	786303	Latch Assembly
	786745	Screw, 8 X 3/8 (4)
11	786378	Bracket, Latch Mounting
16	786381	Bracket, Switch
	786752	Screw, 4-40 (2)
17	4179225	Burner Box
	786745	Screw, 8 X 3/8 (6)
19	786386	Knob, Latch Handle
28	786682	Orifice
29	786683	Plate, Cover
31	786684	Bracket, Top (2)
32	786754	Bracket, Electrode (2)